

QUICK RELEASE SOCKET WRENCH REPAIR

Simple instructions for maintaining any Lowell 50QR Series Quick Release Socket Wrench



1. Remove all parts, clean the inside of the wrench and all parts



2. Lightly lubricate the inside of wrench where the pawls sit with lithium grease. Replace pawls, pawl springs and shifter



3. Install plastic spacer, insert tension springs (2) into slots provided in spacer, insert latch (making sure tension springs are engaged), put on cover plate and secure with cap screw



4. Pull back latch, insert socket

Model	Repair Kit*	Cover Plate Kit**
50QR	36902	36903
51QR	36902	36903
564QR	36902	36903
52QR	53Q02	53Q03
53QR	53Q02	53Q03

*Repair Kits include – pawls (2), pawl springs (2) and shifter (1)

**Cover Plate Kits include – cover plate (1), plastic spacer (1), latch (1), tension springs (2) and cap screw (1)

